


REMOTE CONTROL KIT YCF50A REF. YC50-1518

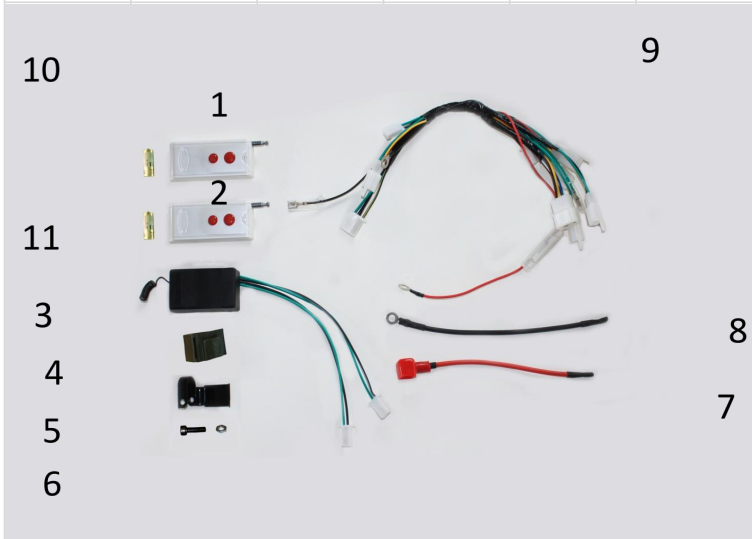

PARTS PROVIDED IN THE KIT		
REMOTE CONTROL	1 and 2	2 PCS
BOX REMOTE CONTROL	3	1 PCS
RUBBER BOX FIXATION	4	1 PCS
REMOTE CONTROL BRACKET	5	1 PCS
SCREW / NUT FOR BRACKET	6	1 SET
BATTERY CABLE A	7	1 PCS
BATTERY CABLE B	8	1 PCS
WIRE HARNESS	9	1 PCS
BATTERY	10 and 11	2 PCS

HOW TO USE THE REMOTE CONTROL



TO CUT THE ENGINE, PUSH 2 TO 3 SECONDS THE TOP BUTTON (A).

NOTES : THE BOTTOM BUTTON IS NO USE.

TO RE START THE ENGINE, PUSH 2 TO 3 SECONDS THE TOP BUTTON (A).

THE RIDER HAVE TO PUSH THE START SWITCH (B) TO BE ABLE TO RE START THE ENGINE.

NOTE : THE REMOTE CONTROL KIT HAVE A USE DISTANCE OF ABOUT 100 METERS.

